

Quick Start Guide

TouchMonitor 5

Read Before Unpacking!
Vor dem Auspacken lesen!

Full
Documentation



RTW
EYES ON YOUR AUDIO

EN:

Quick Start Guide for

RTW TouchMonitor 5

Model 220517NT for Dante® AoIP networks

Model 220518NT for Ravenna® AoIP networks

© **RTW** January 2025 | Changes without prior notice!
RTW GmbH & Co. KG

Am Wassermann 25 | 50829 Koeln (Cologne) | Germany
Phone +49 221. 70 913-0
sales@rtw.com | www.rtw.com

Attention - This quick start guide provides an initial overview of the steps required to quickly set up your TouchMonitor 5.

The detailed operating manual, more documentation and the latest software is available for download at the RTW website (Support > Manuals & Software Downloads > Audio-Monitors > TouchMonitor 5).

DE:

Schnellstart-Anleitung für

RTW TouchMonitor 5

Modell 220517NT für Dante®-AoIP-Netzwerke

Modell 220518NT für Ravenna®-AoIP-Netzwerke


© **RTW** 01/2025 | Änderungen vorbehalten!
RTW GmbH & Co. KG

Am Wassermann 25 | 50829 Köln | Germany
Phone +49 221. 70 913-0
sales@rtw.com | www.rtw.com




Achtung - Diese Schnellstart-Anleitung gibt Ihnen einen ersten Überblick über die Schritte zur schnellen Inbetriebnahme Ihres TouchMonitor 5.

Das ausführliche Benutzerhandbuch, weitere Dokumentationen und die neueste Software stehen auf der RTW-Webseite (Support > Manuals & Software Downloads > Audio Monitors > TouchMonitor 5) zum Download bereit.





Unpacking | Auspacken

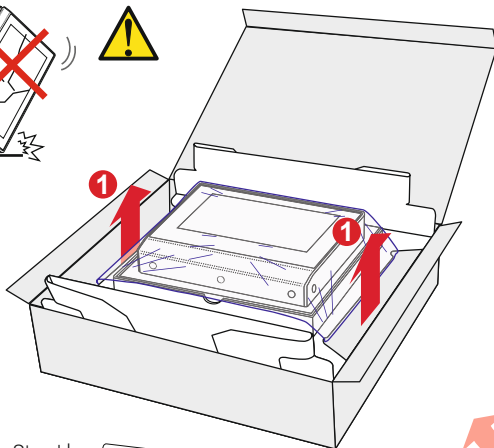


Mount the Stand |
Fuß montieren

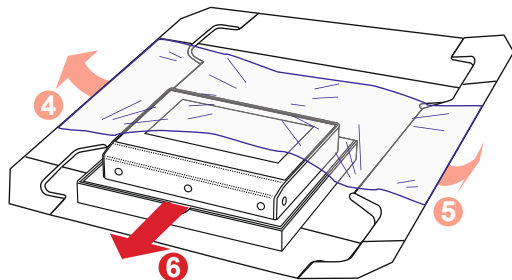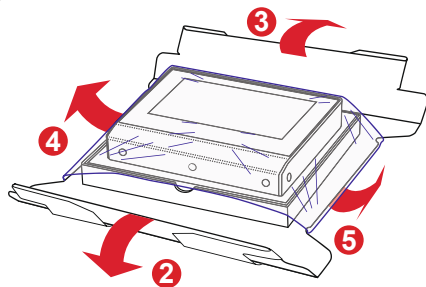
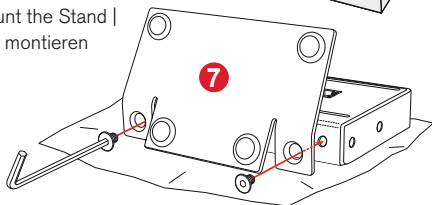


Safety | Sicherheit

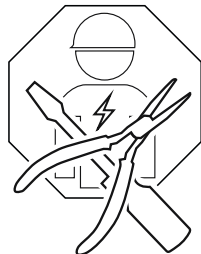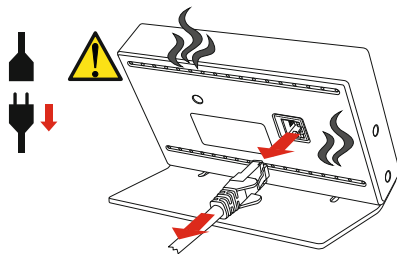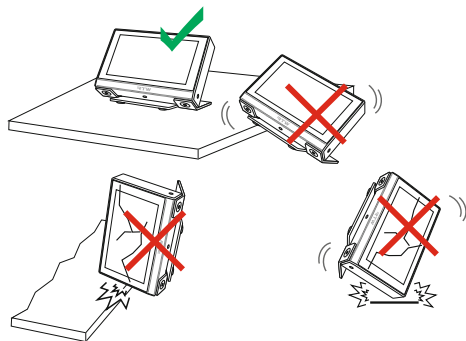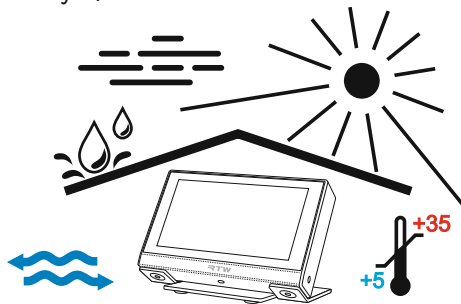

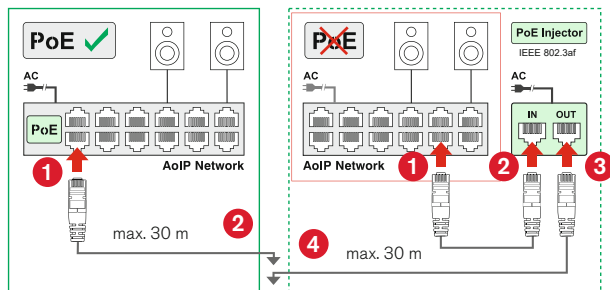

TouchMonitor 5 is certified with CAT 7 cables, but CAT 5E, CAT 6 or CAT 7 can be used.
Maximum cable length: 30 m

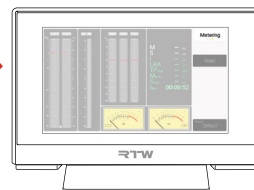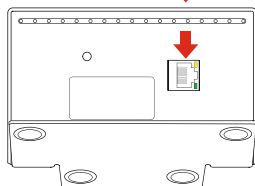

Accessory | Zubehör 14554-xx Ethernet Power Injector



Integrate Into Your Audio-Network | Ins Audio-Netzwerk einbinden

Assign your sources to be used on your TouchMonitor 5. |

Wählen Sie die Quellen, die Sie mit Ihrem TouchMonitor 5 verwenden wollen.



Filter Transmitters

Filter Receivers

Receivers (24)

Digiface-164bcc

RTW-TM5-6G0GQEF

TouchMonitor 5 Inputs

RTW-TCS-1ea7d6

Transmitters (12)

Digiface-164bcc

RTW-TCS-1ea7d6



Session sinks | Ins/Outs | I/O Router | Statistics | Debug

Configuration

IO: Stream

Label:

Source:

Delay (samples): 0

Ignore reflck GMID: ☒ accept source locked to any PTP Master

Channels:

Channel count: 2

Count adapted: ☐

1, 2

Outputs: 1, 2

1: ☒ 1

2: ☒ 2

3: ☐ 3

4: ☐ 4

5: ☐ 5

6: ☐ 6

7: ☐ 7

8: ☐ 8

9: ☐ 9

10: ☐ 10

11: ☐ 11

12: ☐ 12

13: ☐ 13

14: ☐ 14

Session Info

Status:

Session name:

Playout delay:

RTSP Host:

Interface 1

RTP status:

Clock domain:

Address:

Payload:

Interface 2

RTP status:


Clock domain:

Address:

Payload:

SDP

Find IP Address, Access WebApp | IP-Adresse finden, WebApp öffnen

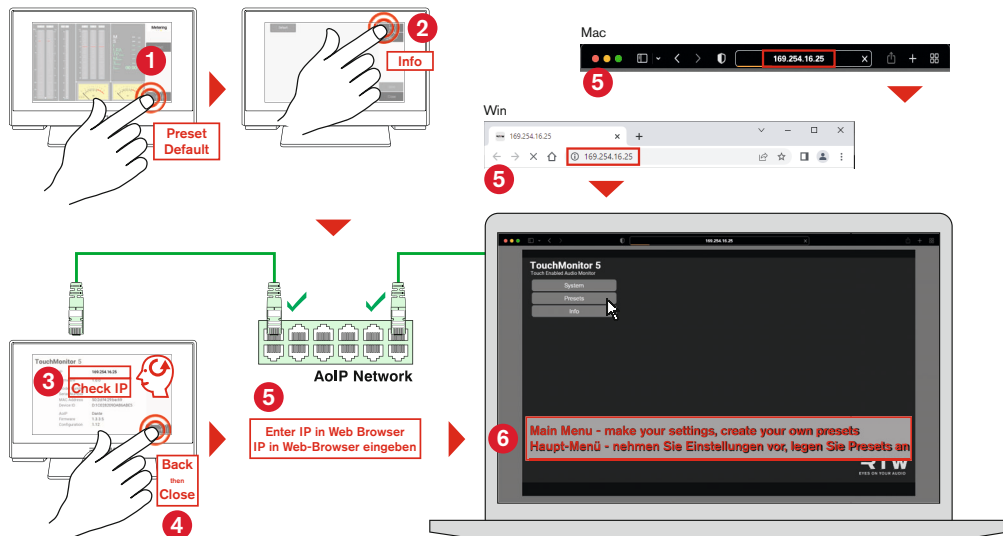



MAN22500

RTW GmbH & Co. KG
Am Wassermann 25 | 50829 Koeln (Cologne) | Germany
Phone: +49 221. 70 913-0
Internet: www.rtw.com | E-Mail: sales@rtw.com

RTW
EYES ON YOUR AUDIO